

MAINTENANCE SCHEDULE (FEBRUARY '06)  
EUROPE 15,000 km NEW BASIC INTERVAL

MAINTENANCE OPERATIONS  
I: Inspect and correct or replace as necessary.

new information

corrections

GASOLINE ENGINE

R: Replace or change or lubricate.

| SERVICE INTERVALS:<br>Odometer reading or months, whichever comes first           |                                 |               | ODOMETER READING  |     |    |      |    |      |    |      |    |      |    |      | Months<br><br>(    ): for reference      | 1GR-FE<br>(4.0 V6) |                |  |                |   |   |
|---|---------------------------------|---------------|---|-----|----|------|----|------|----|------|----|------|----|------|--|--------------------|----------------|--|----------------|---|---|
|   |                                 | × 1,000 km    | 1   | 7.5 | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60 | 67.5 | 75 | 82.5 |  | 90                 | GRJ120/G RJ125 |  |                |   |   |
| MAINTENANCE ITEMS   |                                 | × 1,000 miles | 1   | 4.5 | 9  | 13.5 | 18 | 22.5 | 27 | 31.5 | 36 | 40.5 | 45 | 49.5 |  | 54                 | 02/08          | 03/11<br>04/08                           | 05/08<br>06/08 |   |   |
| Timing Belt   |                                 |               | Replace every 150,000 km (90,000 miles)   |     |    |      |    |      |    |      |    |      |    |      | —  |                    |                |  |                |   |   |
| Valve Clearance (Sensory Inspection)*1  |                                 |               |   |     |    |      |    |      |    |      |    |      |    |      | *I                                       | (Every 72 months)  | ●              | ●  | ●              |   |   |
| Drive belt  | V-ribbed belt                   |               | Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)   |     |    |      |    |      |    |      |    |      |    |      | Initial: 72 and then every 12 months     | ●                  | ●              | ●  |                |   |   |
| Engine oil    (API: SH, SJ)<br>(ILSAC)  |                                 | Normal        | R   |     |    | R    |    |      | R  |      |    | R    |    |      | R  | Every 12 months    |                |  |                |   |   |
|   |                                 | Severe        | R   |     |    | R    |    |      | R  |      |    | R    |    |      | R  | Every 6 months     |                |  |                |   |   |
| Engine oil    (API: SJ, SL)<br>(ILSAC)  |                                 | Normal        | R   |     |    | R    |    |      | R  |      |    | R    |    |      | R  | Every 12 months    | ●              | ●  |                |   |   |
|   |                                 | Severe        | R   |     |    | R    |    |      | R  |      |    | R    |    |      | R  | Every 6 months     | ●              | ●  |                |   |   |
| Engine oil    (API: SL, SM)<br>(ILSAC)  |                                 | Normal        | R   |     |    | R    |    |      | R  |      |    | R    |    |      | R  | Every 12 months    |                |  | ●              |   |   |
|   |                                 | Severe        | R   |     |    | R    |    |      | R  |      |    | R    |    |      | R  | Every 6 months     |                |  | ●              |   |   |
| Engine oil filter   |                                 | Normal        | R   |     |    | R    |    |      | R  |      |    | R    |    |      | R  | Every 12 months    | ●              | ●  | ●              |   |   |
|   |                                 | Severe        | R   |     |    | R    |    |      | R  |      |    | R    |    |      | R  | Every 6 months     | ●              | ●  | ●              |   |   |
| Cooling and heater system *2  |                                 |               | I   |     |    | I    |    |      | I  |      |    | I    |    |      | Every 24 months                          | ●                  | ●              | ●  |                |   |   |
| Engine coolant  | LLC (red/green) *3              |               |   |     |    |      |    |      | R  |      |    | R    |    |      | Initial: 36 months                       | ●                  |                |  |                |   |   |
|   | S-LLC (pink) *4                 |               | I   |     |    | I    |    |      | I  |      |    | I    |    |      |  |                    | ●              | ●  |                |   |   |
|   |                                 |               | First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles)           |     |    |      |    |      |    |      |    |      |    |      |  |                    | ●              | ●  |                |   |   |
| Inverter coolant  | S-LLC (pink) *4                 |               | I   |     |    | I    |    |      | I  |      |    | I    |    |      |  |                    |                |  |                |   |   |
|   |                                 |               | First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles)           |     |    |      |    |      |    |      |    |      |    |      |  |                    |                |  |                |   |   |
| Exhaust pipes and mountings   |                                 |               | I   |     |    | I    |    |      | I  |      |    | I    |    |      | Every 24 months                          | ●                  | ●              | ●  |                |   |   |
| Spark plugs   | Platinum or Iridium Tipped type |               | Replace every 90,000 km (54,000 miles)  |     |    |      |    |      |    |      |    |      |    |      | —  |                    |                |  |                |   |   |
|   | Others                          |               | I   |     |    | R    |    |      | I  |      |    | I    |    |      | I: Every 24 months<br>R: Every 48 months | ●                  | ●              | ●  |                |   |   |
|   |                                 |               |   |     |    |      |    |      |    |      |    |      |    |      |  |                    |                |  |                |   |   |
| Battery   |                                 |               | No maintenance  |     |    |      |    |      |    |      |    |      |    |      | —  |                    |                |  |                |   |   |
| Fuel filter   | (Aygo only)                     |               | Replace every 180.000 km (108.000 miles)  |     |    |      |    |      |    |      |    |      |    |      | 15 years                                 |                    |                |  |                |   |   |
| Air cleaner filter<br>(from October 2002, applicable to all models in production) | Normal                          |               | I   |     |    | I    |    |      | I  |      |    | R    |    |      | I  |                    |                | I: Every 24 months<br>R: Every 48 months | ●              | ● | ● |
|   | Dusty road                      |               | I   |     |    | I    |    |      | I  |      |    | R    |    |      | I  |                    |                | I: Every 12 months<br>R: Every 48 months | ●              | ● | ● |
| Air cleaner filter  | Normal                          |               | I   |     |    | I    |    |      | R  |      |    | I    |    |      | R  |                    |                | I: Every 24 months<br>R: Every 48 months |                |   |   |
|   | Dusty road                      |               | Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months. |     |    |      |    |      |    |      |    |      |    |      | —  |                    |                |  |                |   |   |
| Fuel tank cap, fuel lines, connections and fuel vapor control valve               |                                 |               | I   |     |    | I    |    |      | I  |      |    | I    |    |      | Every 24 months                          | ●                  | ●              | ●  |                |   |   |
| Charcoal    canister  | Aygo only                       | *5            |   |     |    |      |    |      |    |      |    | I    |    |      | —  | ●                  | ●              | ●  |                |   |   |
|   |                                 | Others        |   |     |    | I    |    |      |    |      |    | I    |    |      | Every 24 months                          | ●                  | ●              | ●  |                |   |   |
|   |                                 | Normal        |   |     |    |      |    |      |    |      |    | I    |    |      | —  |                    |                |  |                |   |   |
|   |                                 | Severe        |   |     |    | I    |    |      |    |      |    | I    |    |      | Every 24 months                          |                    |                |  |                |   |   |
| Charcoal    canister filter   | Aygo only                       | Normal        |   |     |    |      |    |      |    |      |    | R    |    |      | —  |                    |                |  |                |   |   |
|   |                                 | Severe        |   |     |    | R    |    |      |    |      |    | R    |    |      | Every 24 months                          |                    |                |  |                |   |   |

\*1: Check for tappet noise and engine vibration and adjust if necessary.  
\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary  
\*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.  
\*4: Only use "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long life hybrid organic acid technology (= combination of low phosphates and organic acids)  
\*5: For Sweden, Norway and Finland only.

DIESEL ENGINE

R: Replace or change or lubricate.

| DIESEL ENGINE   |  |                         |   |   |   |    |      |    |      |    |      |    |      |    | R: Replace or change or lubricate. |  |  |        | LC120          |      |       |   |
|---|--|-------------------------|---|---|---|----|------|----|------|----|------|----|------|----|------------------------------------|--|--|--------|----------------|------|-------|---|
| SERVICE INTERVALS:<br>Odometer reading or months, whichever comes first           |  |                         |   | ODOMETER READING  |   |    |      |    |      |    |      |    |      |    |                                    | Months<br><br>(    ): for reference      | 1KD-FTV<br>(3.0 D4D)                     |        |                |      |       |   |
|   |  |                         | × 1,000 km  | 1   | 7.5   | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60 | 67.5 | 75 | 82.5                               |  | 90                                       | KDJ12# |                |      |       |   |
| MAINTENANCE ITEMS   |  |                         | × 1,000 miles   | 1   | 4.5   | 9  | 13.5 | 18 | 22.5 | 27 | 31.5 | 36 | 40.5 | 45 | 49.5                               |  | 54                                       | 02/08  | 03/11<br>04/08 | 0508 | 06/08 |   |
| Timing Belt   |  |                         | Replace every 105,000 km (60,000 miles)   |   |   |    |      |    |      |    |      |    |      |    | —                                  |  |  |        |                |      |       |   |
|   |  |                         | Replace every 150,000 km (90,000 miles)   |   |   |    |      |    |      |    |      |    |      |    | —                                  |  | ●  | ●      | ●              | ●    |       |   |
| Valve Clearance   |  | *I : Sensory Inspection |   |   |   |    |      |    |      | *I |      |    |      |    |                                    | *I                                       | (Every 48 months)                        | ●      | ●              | ●    | ●     |   |
|   |  | A: Adjust               |   | A   |   |    | A    |    |      | A  |      |    | A    |    |                                    | A  | Every 12 months                          |        |                |      |       |   |
| Drive belt  |  | Normal belt             |   | I   |   |    | I    |    |      | I  |      |    | I    |    |                                    | I  | Every 12 months                          |        |                |      |       |   |
|   |  | V-ribbed belt           |   | Inspect at 105.000 km (63.000 miles). After, inspect every 15.000 km (9.000 miles)            |   |    |      |    |      |    |      |    |      |    |                                    | Initial 72 months; then, every 12 months |  | ●      | ●              | ●    | ●     |   |
| Engine oil    (ACEA: B1; API: CF-4 or CF)*1                                       |  |                         | Normal  |   | R   |    |      | R  |      |    | R    |    |      | R  |                                    |  | Every 12 months                          | ●      | ●              | ●    | ●     |   |
|   |  |                         | Severe  |   | R   |    |      | R  |      |    | R    |    |      | R  |                                    |  | Every 6 months                           | ●      | ●              | ●    | ●     |   |
|   |  |                         | OMMS  |   | Replace when the reminder light illuminates or after max. 30,000km/24months |    |      |    |      |    |      |    |      |    |                                    |  |  |        |                |      |       | ● |
| Engine oil filter   |  |                         | Normal  |   | R   |    |      | R  |      |    | R    |    |      | R  |                                    |  | Every 12 months                          | ●      | ●              | ●    | ●     |   |
|   |  |                         | Severe  |   | R   |    |      | R  |      |    | R    |    |      | R  |                                    |  | Every 6 months                           | ●      | ●              | ●    | ●     |   |
|   |  |                         | OMMS  |   | Replace when the reminder light illuminates or after max. 30,000km/24months |    |      |    |      |    |      |    |      |    |                                    |  |  |        |                |      |       | ● |
| Cooling and heater system *2  |  |                         |   | I   |   |    | I    |    |      | I  |      |    | I    |    |                                    | Every 24 months                          | ●  | ●      | ●              | ●    |       |   |
| Engine coolant  |  | LLC (red/green) *3      |   |   |   |    | R    |    |      | R  |      |    | R    |    |                                    | Initial: 36 months                       | ●  |        |                |      |       |   |
|   |  | S-LLC (pink) *4         |   | I   |   |    | I    |    |      | I  |      |    | I    |    |                                    |  |  | ●      | ●              | ●    |       |   |
|   |  |                         | First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles) |   |   |    |      |    |      |    |      |    |      |    |                                    |  |  | ●      | ●              | ●    | ●     |   |
| Exhaust pipes and mountings   |  |                         | I   |   |   | I  |      |    | I    |    |      | I  |      |    | I                                  | Every 12 months                          | ●  | ●      |                |      |       |   |
|   |  |                         | I   |   |   | I  |      |    | I    |    |      | I  |      |    | I                                  | Every 24 months                          |  |        | ●              | ●    |       |   |
| Battery   |  |                         | No maintenance  |   |   |    |      |    |      |    |      |    |      |    | —                                  |  |  |        |                |      |       |   |
| Fuel injection pipes  |  |                         | Replace every 150,000 km (90,000 miles)   |   |   |    |      |    |      |    |      |    |      |    | —                                  |  |  |        |                |      |       |   |
| Fuel filter   |  |                         |   |   |   |    |      |    | R    |    |      | R  |      |    |                                    | Every 72 months                          | ●  | ●      | ●              | ●    |       |   |
|   |  |                         | In-tank filter and in-line filter   |   |   |    |      |    |      |    |      | R  |      |    |                                    | Every 90 months                          |  |        |                |      |       |   |
| Fuel pump   |  |                         | Replace every 300,000 km (180,000 miles)  |   |   |    |      |    |      |    |      |    |      |    |                                    |  |  |        |                |      |       |   |
| Diesel smoke  |  |                         |   |   |   | I  |      |    | I    |    |      | I  |      |    | I                                  | Every 48 months                          | ●  | ●      |                |      |       |   |
|   |  |                         |   |   |   | I  |      |    | I    |    |      | I  |      |    | I                                  | Every 48 months                          |  |        | ●              | ●    |       |   |
| Air cleaner filter<br>(from October 2002, applicable to all models in production) |  | Normal                  |   | I   |   |    | I    |    |      | I  |      |    | R    |    |                                    | I  | I: Every 24 months<br>R: Every 48 months | ●      | ●              | ●    | ●     |   |
|   |  | Dusty road              |   | I   |   |    | I    |    |      | I  |      |    | R    |    |                                    | I  | I: Every 12 months<br>R: Every 48 months | ●      | ●              | ●    | ●     |   |
| Air cleaner filter  |  | Normal                  |   | I   |   |    | I    |    |      | R  |      |    | I    |    |                                    | R  | I: Every 12 months<br>R: Every 48 months |        |                |      |       |   |
|   |  | Dusty road              |   | Inspect every 2,500 km (1,500 miles) and replace every 45,000 km (27,000 miles) or 48 months. |   |    |      |    |      |    |      |    |      |    |                                    | —  |  |        |                |      |       |   |
| Fuel tank cap, fuel lines, connections  |  |                         |   |   |   | I  |      |    | I    |    |      | I  |      |    | I                                  | Every 24 months                          | ●  | ●      | ●              | ●    |       |   |

\*1: You may also use API CE or CD.

\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corros etc.; clean if necessary

\*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

\*4: Only use "Toyota Super Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long life hybrid organic acid technology (= combination of low phosphates and organic acids)

NMSC choice

MAINTENANCE SCHEDULE (FEBRUARY '06)  
EUROPE 15,000 km NEW BASIC INTERVAL  
CHASSIS AND BODY 1/2

MAINTENANCE OPERATIONS

I: Inspect / correct or replace  
T: Tighten to specified torque.  
R: Replace or change or lubricate.  
L: Lubricate

new information  
corrections

| SERVICE INTERVALS:<br>Odometer reading or months, whichever comes first                   |  |  | ODOMETER READING  |  |  |     |    |      |    |      |    |      |    |      | Land Cruiser<br>120 series               |      |                 |        |  |                         |   |
|---|--|--|---|--|--|-----|----|------|----|------|----|------|----|------|--|------|-----------------|--------|--|-------------------------|---|
|   |  |  | × 1,000 km  |  | 1  | 7.5 | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60 | 67.5 | 75                                       | 82.5 | 90              | Months | GRJ12#<br>KDJ12#                         |                         |   |
| MAINTENANCE ITEMS   |  |  | × 1,000 miles   |  | 1  | 4.5 | 9  | 13.5 | 18 | 22.5 | 27 | 31.5 | 36 | 40.5 | 45                                       | 49.5 | 54              |        | 02/08                                    | 03/11<br>05/08<br>06/08 |   |
| Clutch pedal, return spring and damper - Mechanical type                                  |  |  |   |  |  |     | I  |      |    |      |    |      | I  |      |  |      |                 |        |  |                         |   |
| Brake pedal and parking brake   |  |  |   |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        | ●  |                         |   |
| Brake linings and drums<br>(Include brake linings of parking brake)                       |  |  | Normal  |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        | ●  |                         |   |
|   |  |  | Severe  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 12 months |        | ●  |                         |   |
| Brake pads and discs  |  |  | Normal  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 12 months |        | ●  |                         |   |
|   |  |  | Severe  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 6 months  |        | ●  |                         |   |
| SAE J1703 or FMVSS No. 116 DOT3   |  |  |   |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        | ●  |                         |   |
| SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4  |  |  |   |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        |  |                         |   |
| SAE J1704 or FMVSS No. 116 DOT4   |  |  |   |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        |  |                         |   |
| Clutch fluid for auto clutch system   |  |  |   |  |  |     | R  |      |    |      |    |      | R  |      |  |      | Every 24 months |        |  |                         |   |
| Sequential M/T system fluid   |  |  |   |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        |  |                         |   |
| Brake fluid   |  |  | SAE J1703 or FMVSS No. 116 DOT3   |  |  |     | R  |      |    |      |    |      | R  |      |  |      | Every 24 months |        | ●  |                         |   |
|   |  |  | SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4                            |  |  |     | R  |      |    |      |    |      | R  |      |  |      | Every 24 months |        |  |                         |   |
|   |  |  | SAE J1704 or FMVSS No. 116 DOT4   |  |  |     | R  |      |    |      |    |      | R  |      |  |      | Every 24 months |        |  |                         |   |
| Brake pipes and hoses   |  |  |   |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        | ●  |                         |   |
| Vacuum pump for brake booster (Diesel engines only)                                       |  |  | Luk-AT or Pierburg  |  | Replace every 195.000 km (121.000 miles) or 120 months |     |    |      |    |      |    |      |    |      |  |      |                 |        | 15                                       |                         |   |
|   |  |  | Others  |  | Inspect every 195.000 km (121.000 miles) or 120 months |     |    |      |    |      |    |      |    |      |  |      |                 |        | 15                                       |                         |   |
| Power steering fluid  |  |  | A/T fluid DEXRON® II or III   |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        | ●  |                         |   |
|   |  |  | TOYOTA P.S. fluid EH or equivalent                                      |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        |  |                         |   |
| Steering wheel, linkage and steering gear box   |  |  | Normal  |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        | ●  |                         |   |
|   |  |  | Severe  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 12 months |        | ●  |                         |   |
| SRS airbag *1   |  |  | Initial inspect at first 120 months from the vehicle registration date. |  |  |     |    |      |    |      |    |      |    |      |  |      |                 |        |  |                         |   |
| Propeller shaft   |  |  | NLGI No. 1 or No. 2   |  | Normal   |     | L  |      | L  |      | L  |      | L  |      | L  |      | L               |        | Every 24 months                          | 7                       |   |
|   |  |  |   |  | Severe   |     | L  |      | L  |      | L  |      | L  |      | L  |      | L               |        | Every 12 months                          | 7                       |   |
|   |  |  |   |  |  |     |    |      |    |      |    |      |    |      |  |      |                 |        |  |                         |   |
| Propeller shaft bolts   |  |  | Normal  |  |  |     | T  |      |    |      |    |      | T  |      |  |      | Every 24 months |        | ●  |                         |   |
|   |  |  | Severe  |  | T  |     | T  |      | T  |      | T  |      | T  |      | T  |      | Every 12 months |        | ●  |                         |   |
| Drive shaft boots   |  |  | Normal  |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        |  |                         |   |
|   |  |  | Severe  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 12 months |        | ●  |                         |   |
|   |  |  | Normal  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 12 months |        | ●  |                         |   |
|   |  |  | Severe  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 6 months  |        | ●  |                         |   |
| Drive shaft bolts   |  |  | Normal  |  |  |     | T  |      |    |      |    |      | T  |      |  |      | Every 24 months |        |  |                         |   |
|   |  |  | Severe  |  | T  |     | T  |      | T  |      | T  |      | T  |      | T  |      | Every 12 months |        |  |                         |   |
|   |  |  | Normal  |  | T  |     | T  |      | T  |      | T  |      | T  |      | T  |      | Every 12 months |        | ●  |                         |   |
|   |  |  | Severe  |  | T  |     | T  |      | T  |      | T  |      | T  |      | T  |      | Every 6 months  |        | ●  |                         |   |
| Suspension ball joints and dust covers  |  |  | Normal  |  |  |     | I  |      |    |      |    |      | I  |      |  |      | Every 24 months |        |  |                         |   |
|   |  |  | Severe  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 12 months |        |  |                         |   |
|   |  |  | Normal  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 12 months |        | ●  |                         |   |
|   |  |  | Severe  |  | I  |     | I  |      | I  |      | I  |      | I  |      | I  |      | Every 6 months  |        | ●  |                         |   |
| Shift lever of 6-speed manual transmission  |  |  |   |  |  |     | I  |      |    |      |    |      | I  |      |  |      | --              |        |  |                         |   |
| Automatic transmission fluid  |  |  | Vehicles produced before July, '99                                      |  | Normal   |     |    |      | I  |      |    |      | R  |      |  |      | I               |        | I: Every 12 months<br>R: Every 48 months |                         |   |
|   |  |  |   |  | Severe   |     | I  |      | R  |      | I  |      | R  |      | I  |      | R               |        | I: Every 12 months<br>R: Every 24 months |                         |   |
|   |  |  | T-IV  |  | Normal   |     |    |      |    |      | I  |      |    |      |  |      | I               |        | Every 36 months                          | ●                       |   |
|   |  |  |   |  | Normal   |     |    |      |    |      | I  |      |    |      |  |      |                 |        | Every 48 months                          |                         |   |
|   |  |  |   |  | Severe   |     |    |      |    |      | I  |      |    |      | R  |      | R               |        | I: Every 36 months<br>R: Every 72 months | ●                       |   |
|   |  |  | Vehicles produced after August, '99                                     |  | Normal   |     |    |      |    |      | I  |      |    |      |  |      | I               |        | Every 36 months                          |                         |   |
|   |  |  |   |  | Normal   |     |    |      |    |      | I  |      |    |      |  |      |                 |        | Every 48 months                          |                         |   |
|   |  |  |   |  | Severe   |     |    |      |    |      | I  |      |    |      | R  |      | R               |        | I: Every 36 months<br>R: Every 72 months |                         |   |
|   |  |  | Other   |  | Normal   |     |    |      |    |      | I  |      |    |      |  |      | R               |        | I: Every 36 months<br>R: Every 72 months |                         |   |
| Severe  |  |  |   |  | I  |     | R  |      | I  |      | R  |      | R  |      | I: Every 18 months<br>R: Every 36 months |      |                 |        |  |                         |   |
| Manual transmission oil and transfer oil if so equipped<br>(Including auto clutch system) |  |  | API Gear oil GL-4 or GL-5   |  | Normal   |     |    |      |    |      | I  |      |    |      |  |      | Every 48 months |        |  |                         |   |
|   |  |  |   |  | Severe   |     |    |      |    |      | R  |      |    |      |  |      | Every 48 months |        |  |                         |   |
|   |  |  | LV Gear oil API GL-4  |  | Normal   |     |    |      |    |      | I  |      |    |      |  |      |                 |        | Every 48 months                          |                         |   |
|   |  |  |   |  | Severe   |     |    |      |    |      | R  |      |    |      |  |      |                 |        | Every 48 months                          |                         |   |
|   |  |  | Other (GL-4 or GL-5)  |  | Normal   |     |    |      |    |      | I  |      |    |      | I  |      |                 |        | Every 48 months                          |                         | ● |
|   |  |  |   |  | Severe   |     |    |      |    |      | R  |      |    |      | R  |      |                 |        | Every 48 months                          |                         | ● |
| Transfer oil  |  |  | API Gear oil GL-4 or GL-5   |  | Normal   |     |    |      |    |      | I  |      |    |      | I  |      | Every 48 months |        |  |                         |   |
|   |  |  |   |  | Severe   |     |    |      |    |      | R  |      |    |      | R  |      | Every 48 months |        |  |                         |   |
|   |  |  | API Gear oil GL-5   |  |  |     |    |      | R  |      |    |      | R  |      |  |      | R               |        | Every 48 months                          |                         |   |
|   |  |  |   |  | Normal   |     |    |      |    |      | I  |      |    |      | I  |      | Every 48 months |        |  |                         |   |
|   |  |  | API Gear oil GL-5   |  | Severe   |     |    |      |    |      | R  |      |    |      | R  |      | R               |        | Every 48 months                          |                         |   |

\*1: After 120 months from the vehicle registration date, inspect every 24 months.

7: Lubricate within 24 hours after submerging  
15: Replace the blades with new ones; blades are not reusable

7: Lubricate within 24 hours after submerging  
15: Replace the blades with new ones; blades are not reusable

MAINTENANCE SCHEDULE (FEBRUARY '06)  
EUROPE 15,000 km NEW BASIC INTERVAL  
CHASSIS AND BODY 2/2

MAINTENANCE OPERATIONS  
I: Inspect / correct or replace. T: Tighten to specified torque.  
R: Replace or change or lubricate. C: Clean

new information  
 corrections

| SERVICE INTERVALS:<br>Odometer reading or months, whichever comes first             |  |  |                           |  |               | ODOMETER READING                                     |     |    |      |    |      |    |      |                 |  |                 | Land Cruiser<br>120 series |                 |  |                  |                         |   |
|---|--|--|---------------------------|--|---------------|--|-----|----|------|----|------|----|------|-----------------|--|-----------------|----------------------------|-----------------|--|------------------|-------------------------|---|
|   |  |  |                           |  | × 1,000 km    | 1  | 7.5 | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60              | 67.5                                     | 75              | 82.5                       | 90              | Months                                     | GRJ12#<br>KDJ12# |                         |   |
| MAINTENANCE ITEMS   |  |  |                           |  | × 1,000 miles | 1  | 4.5 | 9  | 13.5 | 18 | 22.5 | 27 | 31.5 | 36              | 40.5                                     | 45              | 49.5                       | 54              |  | 02/08            | 03/11<br>05/08<br>06/08 |   |
| Front<br>Differential<br>oil*2  | Differential<br>integrated<br>with<br>transmission | M/T<br>model                                 | API Gear oil GL-4 or GL-5 |  | Normal        |  |     |    |      |    |      | I  |      |                 |  |                 |                            |                 | Every 48 months                            |                  |                         |   |
|   |  |  |                           |  | Severe        |  |     |    |      |    |      |    |      |                 |  |                 |                            |                 | Every 48 months                            |                  |                         |   |
|   |  |  | LV Gear oil API GL-4      |  | Normal        |  |     |    |      |    |      |    | I    |                 |  |                 |                            |                 |  | Every 48 months  |                         |   |
|   |  |  |                           |  | Severe        |  |     |    |      |    |      |    |      |                 |  |                 |                            |                 |  | Every 48 months  |                         |   |
|   |  | A/T<br>model                                 |                           | T-IV   | Normal        |  |     |    |      |    | I    |    |      |                 | I  | Every 36 months |                            |                 |  |                  |                         |   |
|   |  |  |                           |  | Normal        |  |     |    |      |    |      | I  |      |                 | Every 48 months                          |                 |                            |                 |  |                  |                         |   |
|   |  |  |                           |  | Severe        |  |     |    |      |    | I    |    |      | R               | I: Every 36 months<br>R: Every 72 months |                 |                            |                 |  |                  |                         |   |
|   |  |  |                           |  | Normal        |  |     |    |      |    | I    |    |      | I               | Every 36 months                          |                 |                            |                 |  |                  |                         |   |
|   |  |  | WS                        | Normal   |               |  |     |    |      |    | I    |    |      | Every 48 months |  |                 |                            |                 |  |                  |                         |   |
|   |  |  |                           | Normal   |               |  |     |    |      |    |      |    |      | Every 48 months |  |                 |                            |                 |  |                  |                         |   |
|   |  |  |                           | Severe   |               |  |     |    |      |    | I    |    |      | R               | I: Every 36 months<br>R: Every 72 months |                 |                            |                 |  |                  |                         |   |
|   |  |  |                           | Differential separated from transmission (API Gear oil GL-5) |               |  |     |    |      |    |      |    |      |                 |  |                 | R                          | Every 48 months |  | ●                | ●                       |   |
| Rear differential oil   |  | API Gear oil GL-5                            |                           |  |               |  |     |    |      |    |      |    |      | R               | Every 48 months                          |                 | ●                          | ●               |  |                  |                         |   |
|   |  |  |                           | Normal   |               |  |     |    |      | I  |      |    | I    | Every 36 months |  |                 |                            |                 |  |                  |                         |   |
|   |  | A/T fluid WS                                 |                           | Severe   |               |  |     |    |      | I  |      |    |      | R               | I: Every 36 months<br>R: Every 72 months |                 |                            |                 |  |                  |                         |   |
|   |  |  |                           |  |               |  |     |    |      |    |      |    |      |                 |  |                 |                            |                 |  |                  |                         |   |
| Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease |  |  | NLGI No. 2                | Normal   |               |  |     |    |      | R  |      |    |      | R               | Every 24 months                          |                 | 8                          | 8               |  |                  |                         |   |
|   |  |  |                           | Severe   |               |  |     |    |      | R  |      | R  |      | R               | Every 12 months                          |                 | 8                          | 8               |  |                  |                         |   |
| Front and rear suspension   |  |  |                           |  | Normal        |  |     |    |      |    |      |    |      | I               | Every 24 months                          |                 | ●                          | ●               |  |                  |                         |   |
|   |  |  |                           |  | Severe        |  |     |    |      |    | I    |    | I    |                 | I  | Every 12 months |                            | ●               | ●  |                  |                         |   |
| Active height control suspension fluid - Suspension fluid AHC or equivalent         |  |  |                           |  |               |  |     |    |      |    |      |    |      |                 |  |                 | R                          | —               |  |                  |                         |   |
| Active height control gas chamber   |  |  |                           |  |               |  |     |    |      |    |      |    |      | I               |  |                 |                            | I               | I: initial 48 months; then every 12 months |                  |                         |   |
| Bolts and nuts on chassis and body  |  |  |                           |  | Severe only   |  |     |    |      |    |      |    |      | T               |  |                 |                            | T               | Every 12 months                            |                  | ●                       | ● |
| Tires and inflation pressure  |  |  |                           |  | Normal        |  |     |    |      |    |      |    |      | I               |  |                 |                            | I               | Every 24 months                            |                  | ●                       | ● |
|   |  |  |                           |  | Severe        |  |     |    |      |    |      |    |      | I               |  | I               |                            | I               | Every 12 months                            |                  | ●                       | ● |
| Air conditioning filter<br>(not a dealer operation) *3                              |  |  |                           | Normal   |               |  |     |    |      |    |      |    |      | I               |  |                 |                            | I               | Every 24 months                            |                  |                         |   |
|   |  |  |                           | Dusty road   |               |  |     |    |      |    |      |    |      |                 | I  |                 | I                          | Every 12 months |  |                  |                         |   |
|   |  |  |                           | Normal   |               |  |     |    |      |    |      |    |      |                 | R  |                 | R                          | Every 24 months |  |                  |                         |   |
|   |  |  |                           | Dusty road   |               |  |     |    |      |    |      |    |      |                 | R  |                 | R                          | Every 12 months |  |                  |                         |   |
|   |  |  |                           | Normal & Dusty road  |               |  |     |    |      |    |      |    |      |                 | R  |                 | R                          | Every 24 months |  |                  |                         |   |
| Particle filter   |  | Foldable type                                |                           |  |               |  |     |    |      |    |      |    |      | C               |  | R               |                            | C               |  |                  |                         |   |
|   |  |  |                           |  |               |  |     |    |      |    |      |    |      | C               | C  | R               |                            | C               | C  | C                | R                       |   |
|   |  | Pollen removal type                          |                           |  |               |  |     |    |      |    |      |    |      |                 | C  |                 | R                          |                 | C  |                  | R                       |   |
|   |  |  |                           |  |               |  |     |    |      |    |      |    |      |                 | C  | R               | C                          | R               |  |                  |                         |   |
|   |  | Standard & high efficiency type              |                           | Normal   |               |  |     |    |      |    |      |    |      |                 |  | R               |                            |                 | R  |                  | ●                       | ● |
|   |  |  |                           | Dusty road   |               |  |     |    |      |    |      |    |      |                 |  | R               |                            | R               |  | R                |                         | ● |
| Combination filter  |  | Combination filter<br>(high efficiency type) |                           | Normal   |               |  |     |    |      |    |      |    |      | R               |  | R               |                            | R               |  |                  |                         |   |
|   |  |  |                           | Dusty road   |               |  |     |    |      |    |      |    |      |                 | R  | R               | R                          |                 | R  | R                | R                       |   |
|   |  |  |                           |  |               | Replace when the service indicator light illuminates |     |    |      |    |      |    |      |                 |  |                 |                            |                 |  |                  |                         |   |
| Corrosion Inspection  |  |  |                           |  |               |  |     |    |      |    |      |    |      | I               |  |                 | I                          | Every 24 months |  | ●                | ●                       |   |

\*2: Including MR2 rear differential oil  
\*3: Customers should inspect by themselves

8: On vehicles with free-wheel hubs, only thrust bush grease (wheel bearing grease is maintenance free)